

CARE AND MAINTENANCE

- 16 Switch the blender off, and unplug it.
- 17 Don't touch the blade – clean it in warm soapy water, with a brush.
- 18 Wipe outer surfaces with a soft damp cloth.
- 19 Wash the beaker and non-slip base in warm soapy water.
- 20 Don't put the handle in liquid.
- 21 Don't put any part in a dishwasher.

coriander pesto (dip, topping or sauce)

- | | |
|---------------------------|-----------------|
| 2 handfuls leaf coriander | 3 cloves garlic |
| 60g pine nuts | 125ml olive oil |
| 60g grated Parmesan | salt and pepper |

Reserve 50ml of the oil.

Process everything else together till smooth
To adjust the thickness, use a little oil and a short burst of speed.

Repeat till the consistency looks right, then taste, and adjust the seasoning.

Serve as a dip (fairly thick), as a topping for soup (not too thick, but not runny), or tossed through warm pasta (fairly runny).

recipes are available on our website:

<http://www.russellhobbs.com/ifu/550931>


smoothies:

<http://www.russellhobbs.com/ifu/550941>

WIRING UK PLUGS

The product doesn't need an earth. It has a 13A BS1362 fuse in a 13A BS1363 plug. To replace the plug, fit the blue wire to N, and the brown wire to L. Fit the cord grip. If in doubt, call an electrician.

Don't use a non-wireable/moulded plug unless the fuse cover is in place. If you remove the plug, dispose of it.

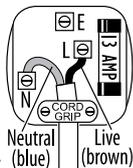

550-287

SERVICE

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer.

If that doesn't solve the problem, Customer Service may be able to offer technical advice. You'll have to tell them the **Model No.** (usually underneath the product).

If they advise you to return the product, pack it carefully, add a note with your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt).

Send it to: Customer Service, Russell Hobbs Ltd, Fir Street, Failsworth, Manchester M35 0HS
email: service@russellhobbs.com
telephone: 0845 658 9700 (local rate number)

GUARANTEE

Defects affecting product functionality appearing within two years of first retail purchase will be corrected by replacement or repair provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected. Documentation, packaging, and product specifications may change without notice.

ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol mustn't be disposed of with unsorted municipal waste, but recovered, reused, or recycled.


 **ONLINE** – www.russellhobbs.co.uk



Russell Hobbs



instructions

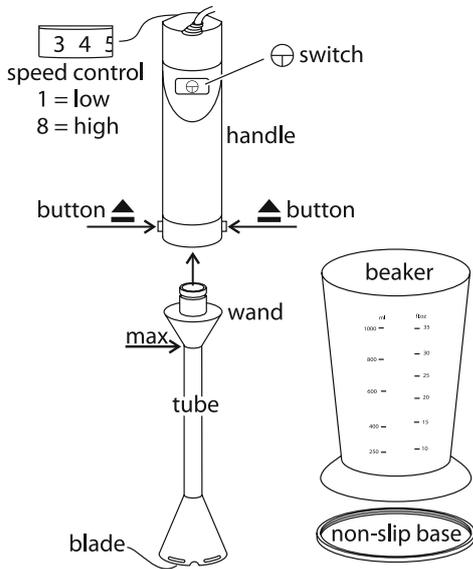

Read the instructions, keep them safe, pass them on if you pass the appliance on. Remove all packaging before use.

IMPORTANT SAFEGUARDS

Follow basic safety precautions, including:

- 1 This blender must only be used by or under the supervision of a responsible adult.
- 2 Don't put the handle in liquid, don't use it in a bathroom, near water, or outdoors. 
- 3 The blade is sharp and very fast, so:
 - 1) don't switch on till the blade is inside the food container
 - 2) switch off before lifting the blade from the food container
 - 3) don't touch the blade – even if cleaning 

- 4) don't plug in till just before using
 - 5) unplug immediately after using
 - 6) unplug before cleaning
 - 7) don't leave it unattended if it's plugged in
 - 8) use and store it out of reach of children.
- 5 When blending hot liquids, switch on and off with the blade under the surface.
 - 6 Don't use the wand in hot oil – even moderately hot oil can cause a nasty burn.
 - 7 Route the cable so it doesn't overhang, and can't be tripped over or caught.
 - 8 Don't fit an attachment or accessory other than those we supply.
 - 9 Don't use the blender for any purpose other than those described in these instructions.
 - 10 Don't run the motor for more than 3 minutes, then let it cool for 3 minutes before reusing.
 - 12 Don't stand the blender on end, it's unstable.
 - 13 Don't use it if it's damaged or malfunctions.
 - 14 If the cable is damaged, return the blender, to avoid hazard.

household use only

FITTING THE WAND

- 1 Unplug before fitting or removing the wand.
- 2 Push the wand on to the end of the handle.
- 3 To remove, press both  buttons, and pull the wand off the handle.

SWITCH

- 4 Press the switch  to start the motor, release it to switch off.

SPEED CONTROL

- 5 Turn the speed control to the speed you want; 1 = low, 8 = high.

- 6 Use high speeds for thick mixes, low speeds for thinner mixes, and for better control over the final stages, to get the texture just right.

USING THE WAND

- 7 Generally, the wand can do anything a normal blender can do, but faster, with less washing up. Make milkshakes, smoothies, or mayonnaise in the beaker. Purée ingredients in the pan you cook them in.
- 8 Don't immerse the wand past the top of the tube. 
- 9 Whatever container you use, make sure it's on a stable, flat surface, and support it with your free hand, to prevent it moving.
- 10 Don't try to chip ice or chop raw meat.

AVOID SPRAY/SPLASHING

- 1) keep the wand vertical
- 2) don't switch on till it's inside the container
- 3) switch off before removing it
- 4) with liquids, switch on and off with the blade under the surface

HOT LIQUIDS

- 11 When using in hot liquids, don't let the blade break the surface at an angle, you may spray liquid outside the container.
- 12 Don't use the wand in hot oil. Splashes from even moderately hot oil cause nasty burns.

THE BEAKER

- 13 Don't fill above the 1000ml mark.
- 14 Sit it on a stable, flat work surface, and support it with your free hand
- 15 The non-slip base can also be used as a lid.